
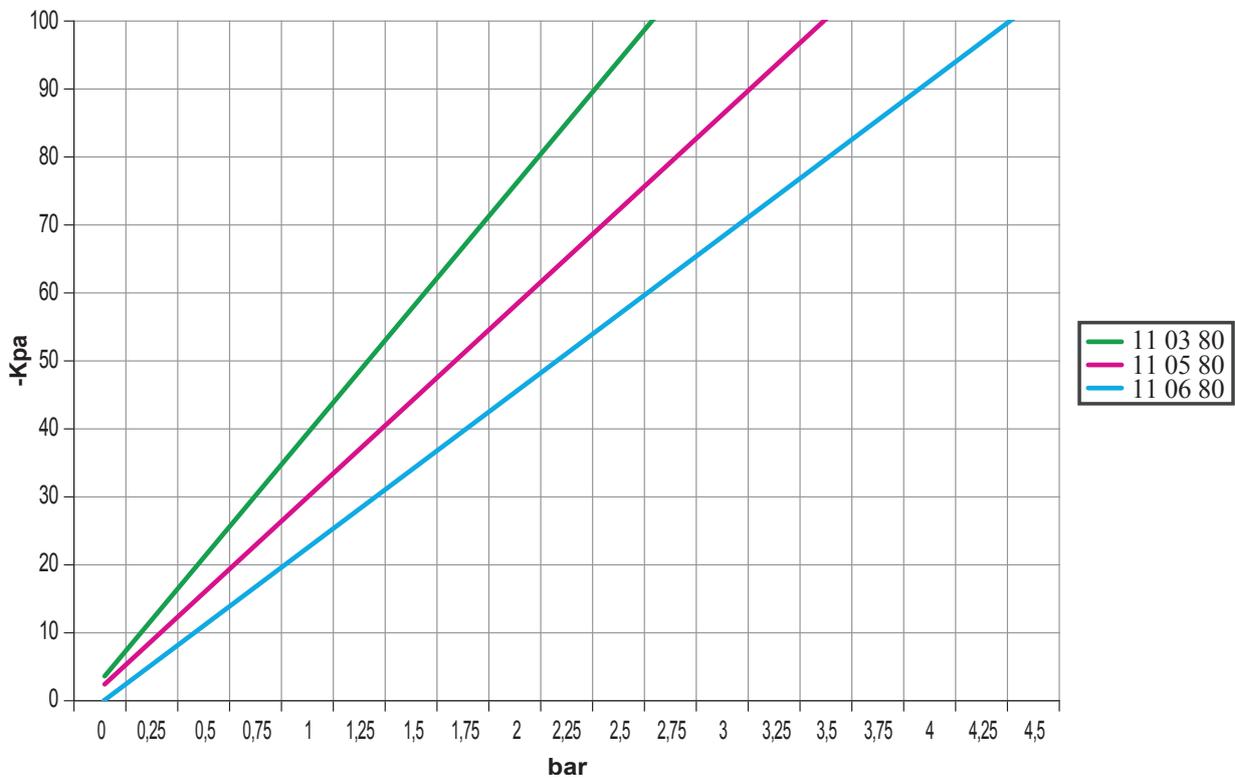


# DIAGRAMS REFERRING TO THE LEVEL OF VACUUM ACCORDING TO THE SERVO-CONTROL SUPPLY PRESSURE

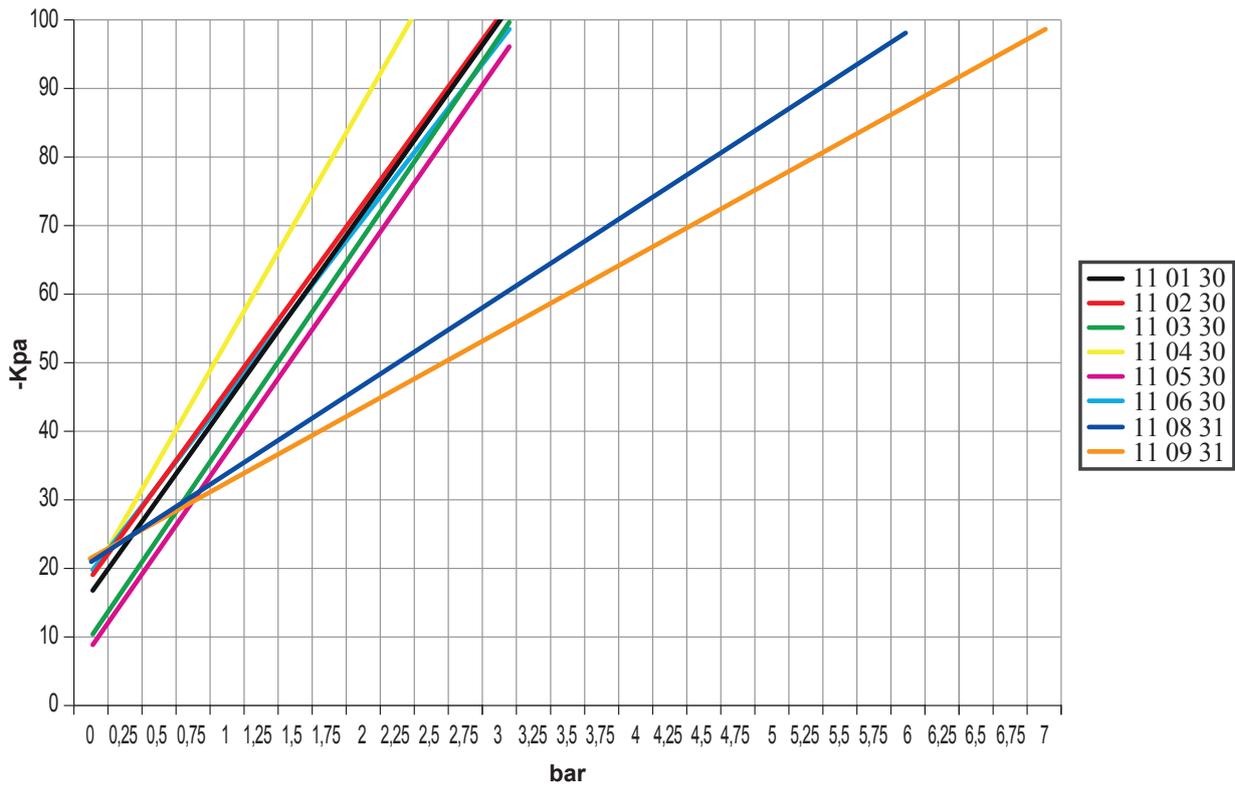

Note: The values shown in the tables are purely indicative as they depend on atmospheric pressure, the flow rate of the vacuum source and the quality of the compressed air supply