
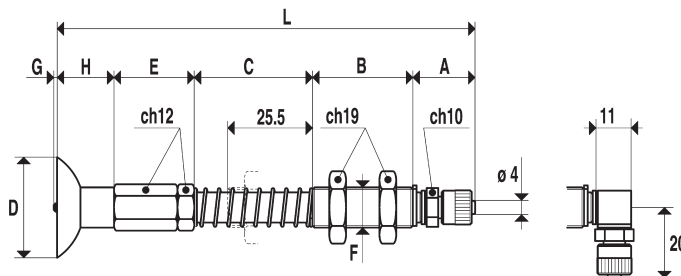


[Small cup holders with plunger valve]

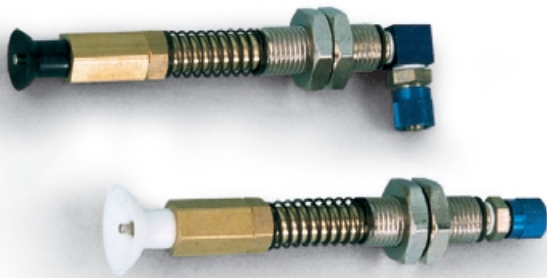

They have the same features of the small cup holders but are inclusive of a plunger valve, integral to a conical valve, which function is to open the suction (and therefore to produce vacuum) only when the cup is in contact with the load to be lifted.

N.B.

Cups are not included in the following part numbers of the cup holder and therefore, they must be ordered separately.

Cup holder with rapid straight fitting for plastic hose \varnothing 4 x 6

Art.	Force Kg.	A	B	C	D \varnothing	E	F \varnothing	G	H	L	Art. Cup
20 12 60	0.28	18	30	35	12	24	12x1.25	1	11	118	01 12 10
20 15 60	0.44	18	30	35	15	24	12x1.25	1	12	119	01 15 10
20 18 60	0.63	18	30	35	18	24	12x1.25	1	12	119	01 18 10
20 20 60	0.78	18	30	35	20	24	12x1.25	1	12	119	01 20 10
20 22 60	0.95	18	30	35	22	24	12x1.25	1	13	120	01 22 10
20 25 60	1.23	18	30	35	25	24	12x1.25	1	16	123	01 25 15
20 30 60	1.76	18	30	35	30	24	12x1.25	1	17	124	01 30 15
20 35 60	2.40	18	30	35	35	24	12x1.25	1	16	123	01 35 15
20 40 60	3.14	18	30	35	40	24	12x1.25	1	18	125	01 40 15

N.B. - L-type fitting is supplied only upon request.